

Woven Wood Blind Installation Instructions

TOOL CHECKLIST REQUIRED:


| | | |
|------------------------------|----------------|-------------|
| Drill (with 4.9mm drill bit) | Measuring Tape | Ruler |
| Screwdriver | Pencil | Step Ladder |

This blind is supplied with a colour co-ordinated valance, bottom rail and accessories

Hanging your blind

Using the universal brackets supplied, you can install your blind in one of two mounting positions:

1. Wall face mount (on the wall above the window) using the rear holes.
2. Window recess or ceiling mount using the side or top holes.

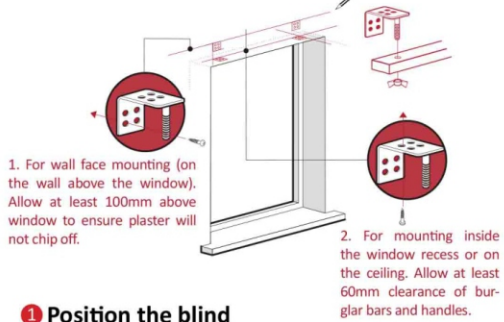


1. For wall face mounting (on the wall above the window). Allow at least 100mm above window to ensure plaster will not chip off.

2. For mounting inside the window recess or on the ceiling. Allow at least 60mm clearance of burglar bars and handles.

1 Position the blind


Hold the blind in place where you are going to install it, making sure that it is centered and level. When positioned correctly, mark the position of each pre-drilled hole in the headrail on the wall/surface with a pencil. Position a bracket over the center of each pencil mark and then mark the position of the bracket holes on the wall/surface with a pencil.

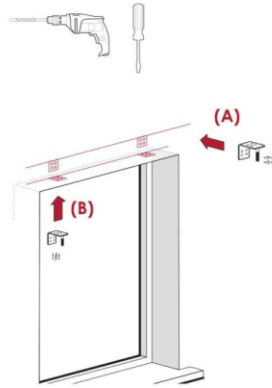

2 Drill the holes and attach brackets


Concrete or Brick: Drill holes where you marked the bracket holes, using a 4.9mm masonry bit and insert wall plugs provided. Place bracket over holes and screw tight with screws provided into the wall plugs.

Wood: Drill holes where you marked the bracket holes, using a 4.9mm steel bit. Place bracket over holes and screw tight with screws provided.

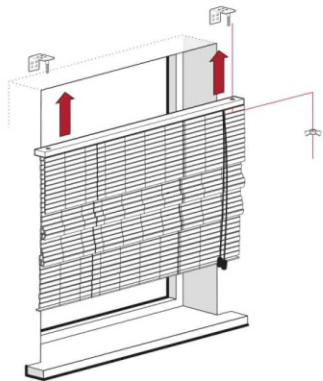

3 Hang the blind

Fit the blind up onto the bolt bracket (through the slot in the headrail) so that the bolt is visible under the headrail. Secure with wing-nuts.

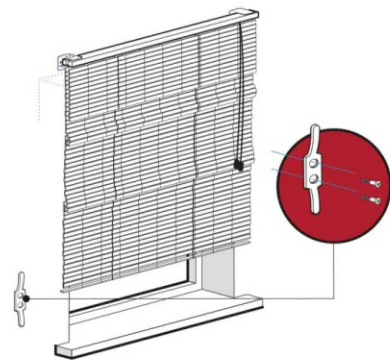


4 Additional items

Fit the cord cleat by holding it against the window frame and marking the holes with a pencil. Drill holes at the pencil markings and screw through the cleat to securely fasten it to the surface.

Woven Wood Blind Installation Instructions


Operating your blind

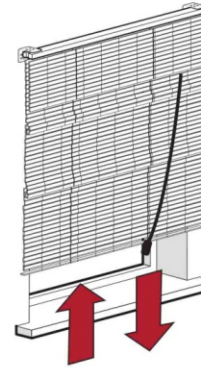

To lower the blind pull the cords to the center of the blind to release the cord-lock and hold while the blind drops. Allow the blind to drop to the desired height and release the cord in a vertical position to lock into itself.

To raise the blind pull the cords to the center of the blind to release the cord-lock and pull up the blind to the desired height. Release the cord in a vertical position to lock into position.

Cleaning your blind

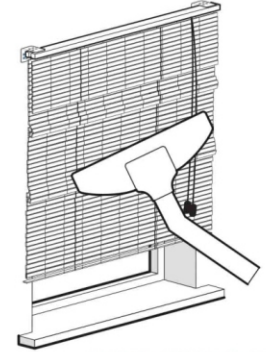

Periodic dusting is recommended. Use the vacuum cleaner upholstery brush attachment to gently vacuum clean. Be careful not to suck onto the blind surface as this may cause damage.

WARNING: Strangulation Hazard

Never put a crib or child's bed near a window. Even if you have child's guards on the window, the temptation to investigate from a hanging window covering is strong for a child

Because young children climb, never put furniture near a window with a dangling cord. Children climb on furniture, play with cords or chains and can become entangled.

To secure cords out of reach of children, use one of the suggested methods:

- A: Tie cord to itself.
B: Use a cleat on wall or window frame.
C: Use a clamp or clothes peg.

